




ARCTIC SILVER QUIET DRIVE CROSS TRAINER 93XW-0XXX-03

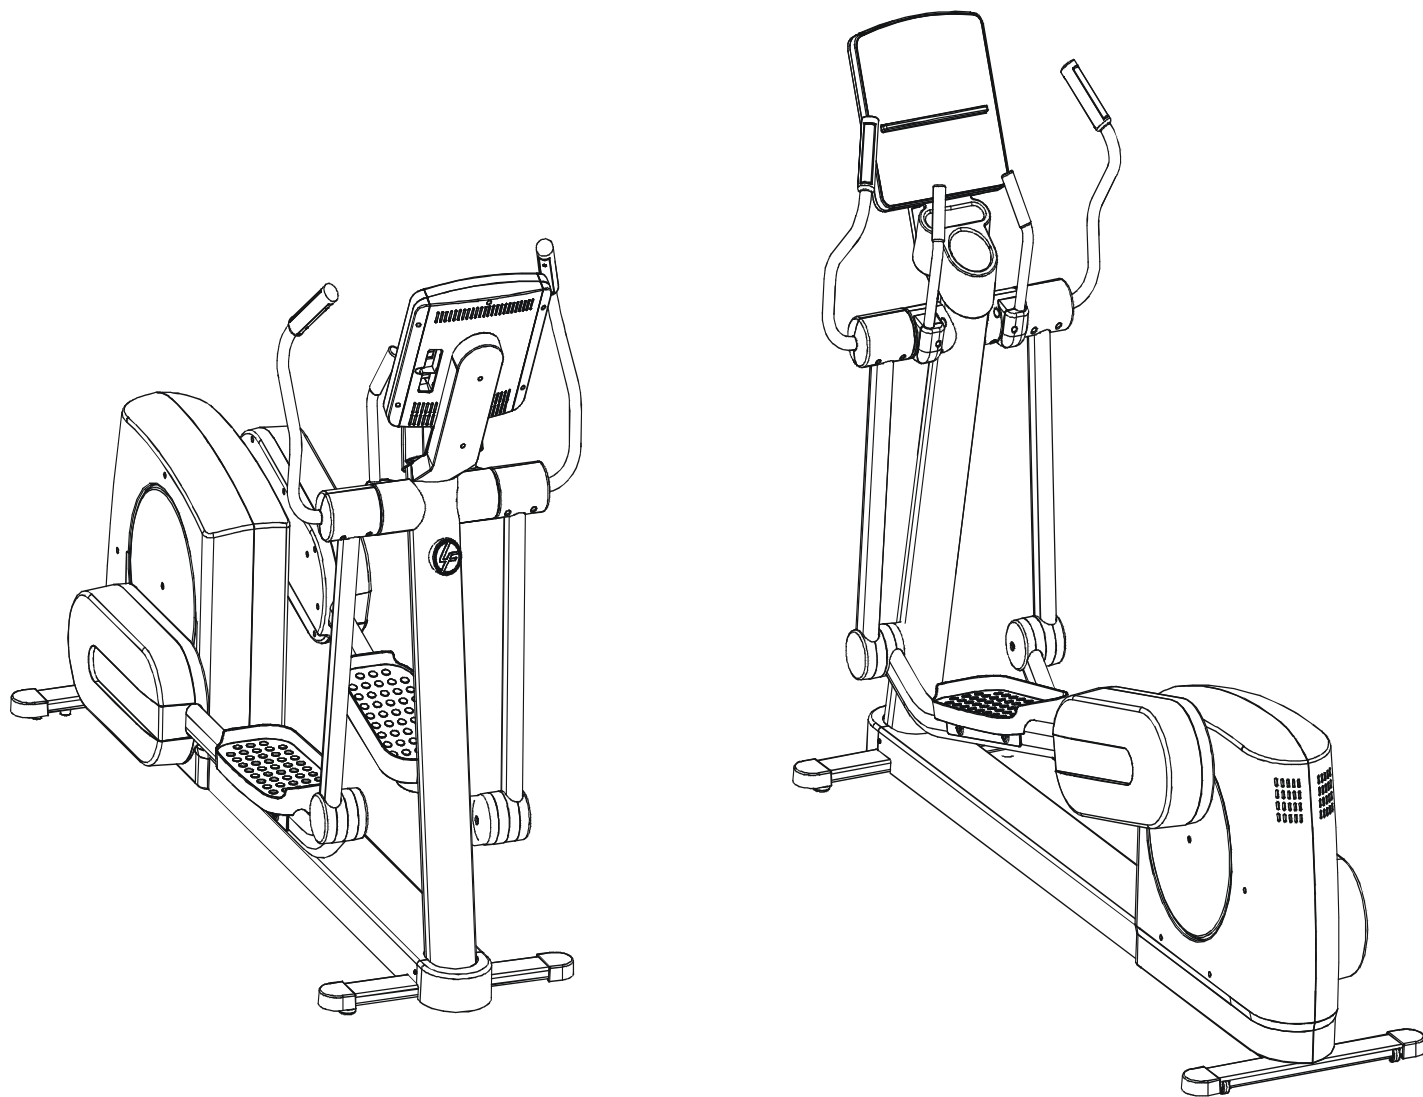

# Customer Support Services ***PARTS MANUAL***

revised 30 Jul 2008

**ARCTIC SILVER QUIET DRIVE 93XW****93XW-0XXX-03****REFERENCES****S/N AXD100000 and up**

OPERATION MANUAL	M051-00K62-A111
SERVICE MANUAL	M051-00K62-A149
TOUCH UP PAINT: SPRAY CAN .5 OZ BOTTLE W/APPLICATOR .33 OZ PEN	0017-00008-0204 0017-00008-0205 0017-00008-0206
PLUG IN OPTION 120/60	GK62-00002-0018
PLUG IN OPTION 240/50 UK	GK62-00002-0019
PLUG IN OPTION 240v	GK62-00002-0020
PLUG IN OPTION 230/50 CONT	GK62-00002-0021
POWER CABLE W/BRACKET ASSY. ASSEMBLY CONSISTS OF: 1) COAX CABLE 2) POWER EXTENSION CABLE 3) ACCESS PANEL BRACKET 4) F TYPE CONNECTOR 5) PLASTIC GROMMET (QTY. 2)	AK62-00210-0000  AK32-00020-0002 AK32-00078-0001 0K62-01179-0001 0017-00021-2846 0017-00042-0754
HARDWARE BAG	AK62-00152-0001

**NOTE: ADDING THE BOLT ON LCD SCREEN TO THE  
93XW-0XXX-03 MAKES THE UNIT A 93XER-0XXX-03.**

**ARCTIC SILVER QUIET DRIVE 93XW**  
**CONTENTS**

**93XW-0XXX-03**  
**S/N AXD100000 and up**

---

	Page
CONSOLE SUPPORT & DEADSHAFT COVERS .....	4
HANDLEBARS AND BULLHORNS .....	5
CONSOLE AND RELATED COMPONENTS .....	6
UPPER FRAME HARDWARE .....	7
ROCKER ARMS AND PEDAL LEVERS .....	8
CRANK COVER AND LOWER CAPS .....	9
LOWER FRAME SHROUDS AND HARDWARE .....	10
PEDAL LEVER COMPONENTS .....	11
PCB, BATTERY, REED SWITCH & BRACKET .....	12
BEARING-INSERT ASSEMBLY .....	13
CRANK ARM PULLEY ASSEMBLY .....	14
DRIVE MODULE .....	15
DRIVE MODULE HARDWARE .....	16
CABLES .....	17


**Note: The 93X has Telemetry only.**

## ARCTIC SILVER QUIET DRIVE 93XW

### Console Support & Deadshaft Covers

93XW-0XXX-03

S/N AXD100000 and up

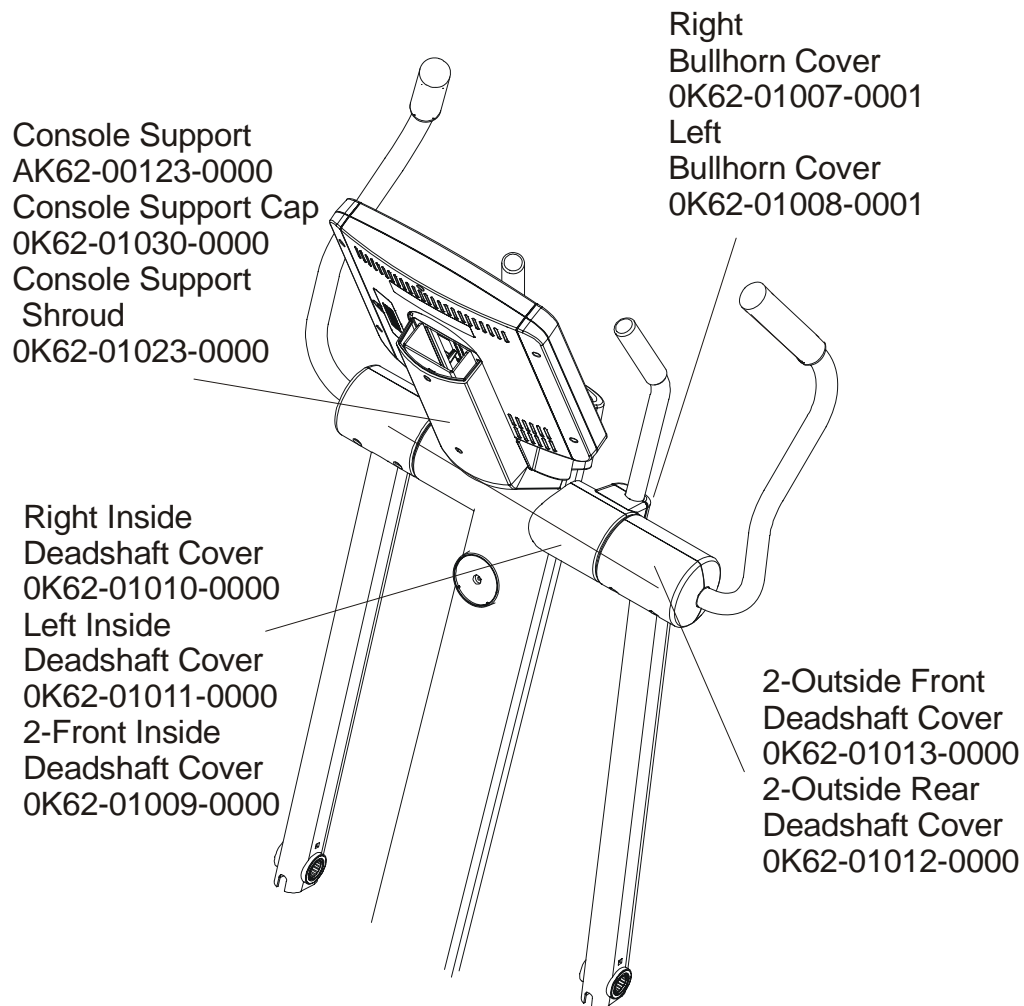


## ARCTIC SILVER QUIET DRIVE 93XW

### Handlebars and Bullhorns

93XW-0XXX-03

S/N AXD100000 and up

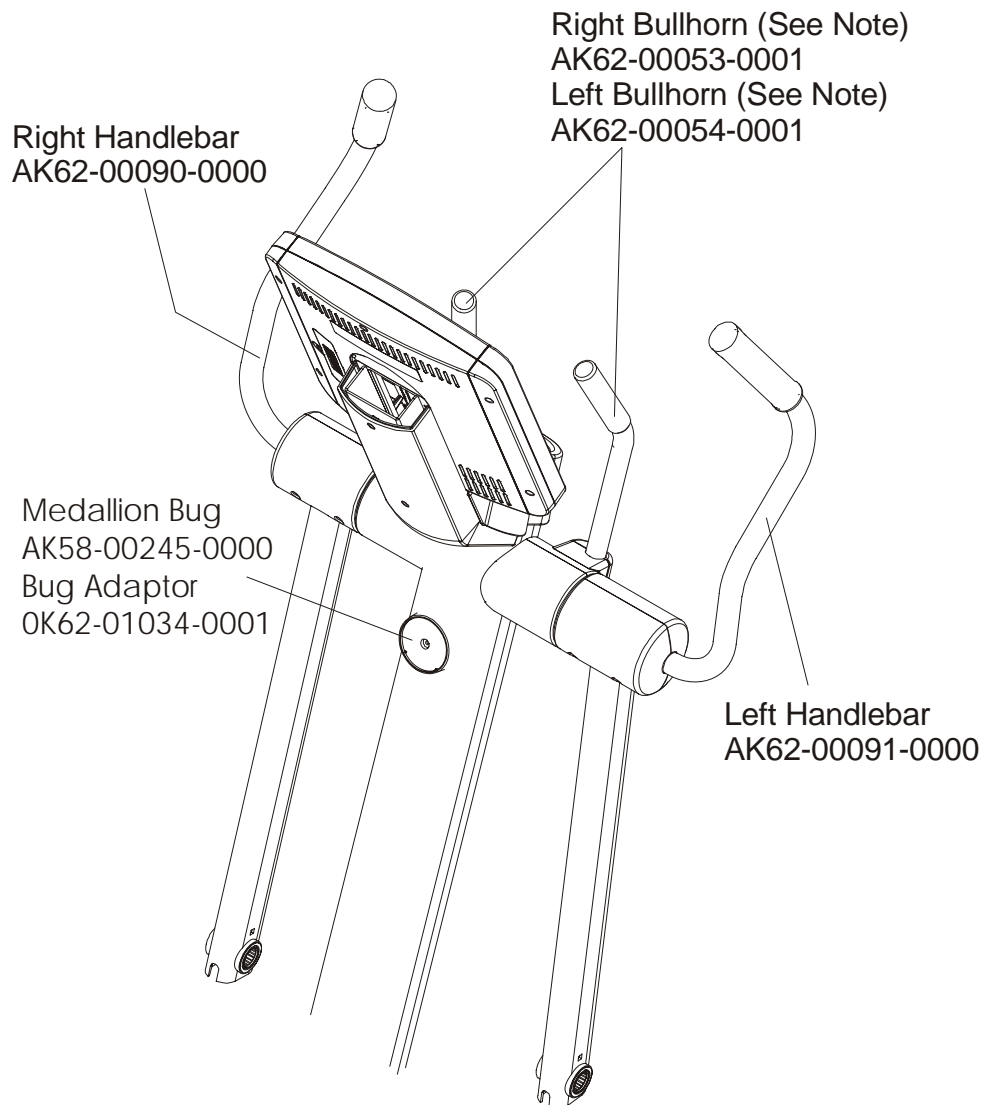

NOTE: The Right Bullhorn Assembly consists of: AK62-00057-0001 Bullhorn, OK62-01136-0000 Grip, and OK62-01199-0001 Gasket.


NOTE: The Left Bullhorn Assembly consists of: AK62-00058-0001 Bullhorn, OK62-01136-0000 Grip and OK62-01199-0001 Gasket

## ARCTIC SILVER QUIET DRIVE 93XW

### Console & Related components

93XW-0XXX-03

S/N AXD100000 and up

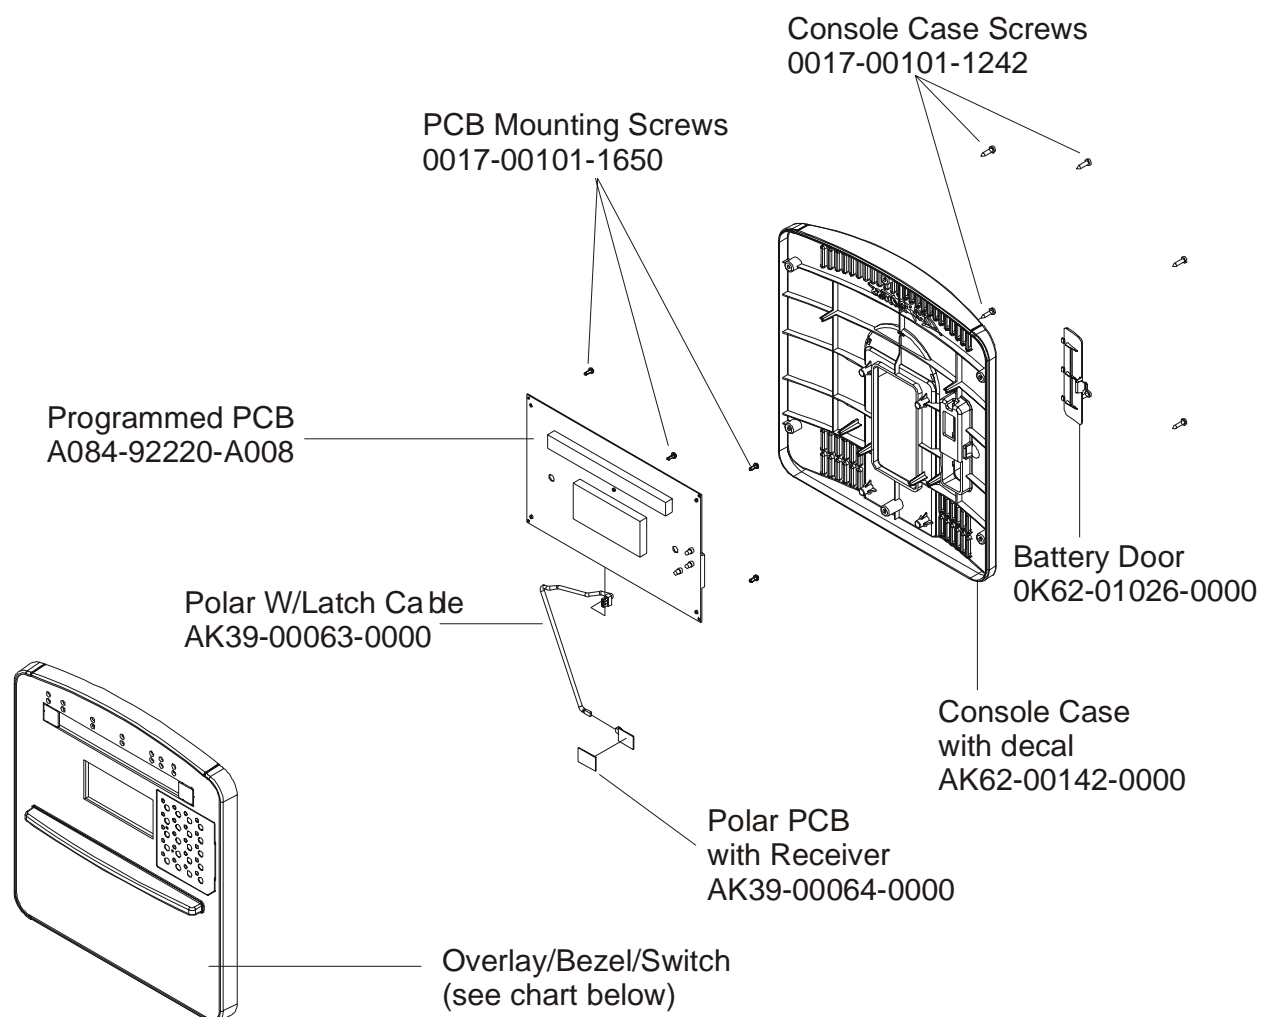

CONSOLE	OVERLAY/BEZEL/SWITCH	LANGUAGE
AK62-00327-0001	AK62-00190-0001	Eng + Met
AK62-00327-0003	AK62-00190-0003	Ger/Met
AK62-00327-0004	AK62-00190-0004	Spn/Met
AK62-00327-0006	AK62-00190-0006	Jap/Met
AK62-00327-0007	AK62-00190-0007	Frn/Met
AK62-00327-0008	AK62-00190-0008	Ital/Met
AK62-00327-0009	AK62-00190-0009	Dut/Met
AK62-00327-0010	AK62-00190-0010	Port/Met
AK62-00327-0014	AK62-00190-0014	Turk/Met


# ARCTIC SILVER QUIET DRIVE 93XW

## Upper Frame Hardware

93XW-0XXX-03

S/N AXD100000 and up

Items Not Shown	
Accessory Tray	0K62-01022-0000
Accessory Tray Mounting Screws (2)	0017-00101-1846

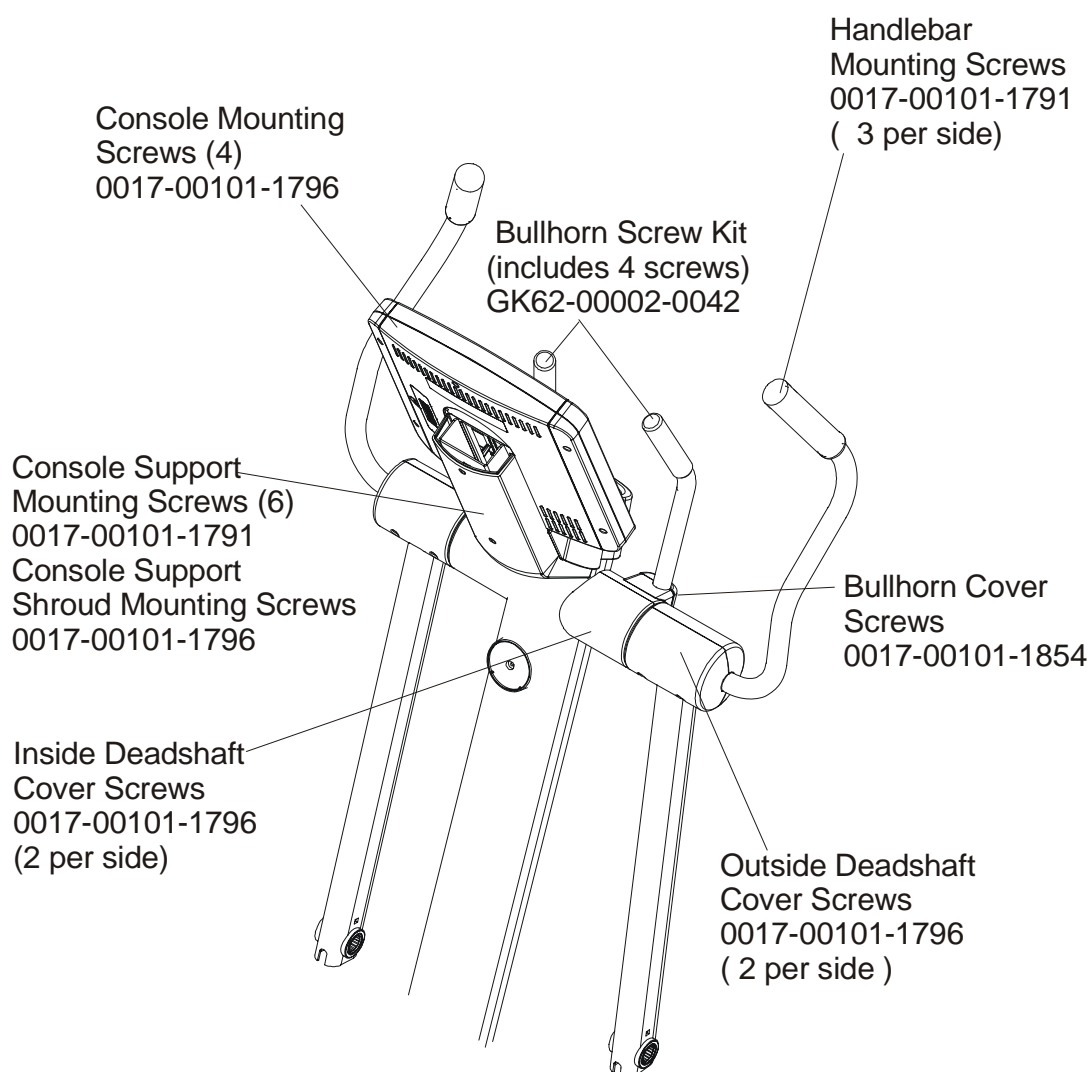

## ARCTIC SILVER QUIET DRIVE 93XW

### Rocker Arms & Pedal Levers


93XW-0XXX-03

S/N AXD100000 and up

Rocker Arms Kit  
GK62-00002-0070  
contents:

Rocker Arms (2)  
Hardened Spacers (2)  
Oilite Washers (2)  
Retaining Rings (2)  
*Loctite 620*  
Alcohol pad

Rocker Arms  
AK62-00002-0070  
Shaft Collar w/Screws  
OK61-01259-0000

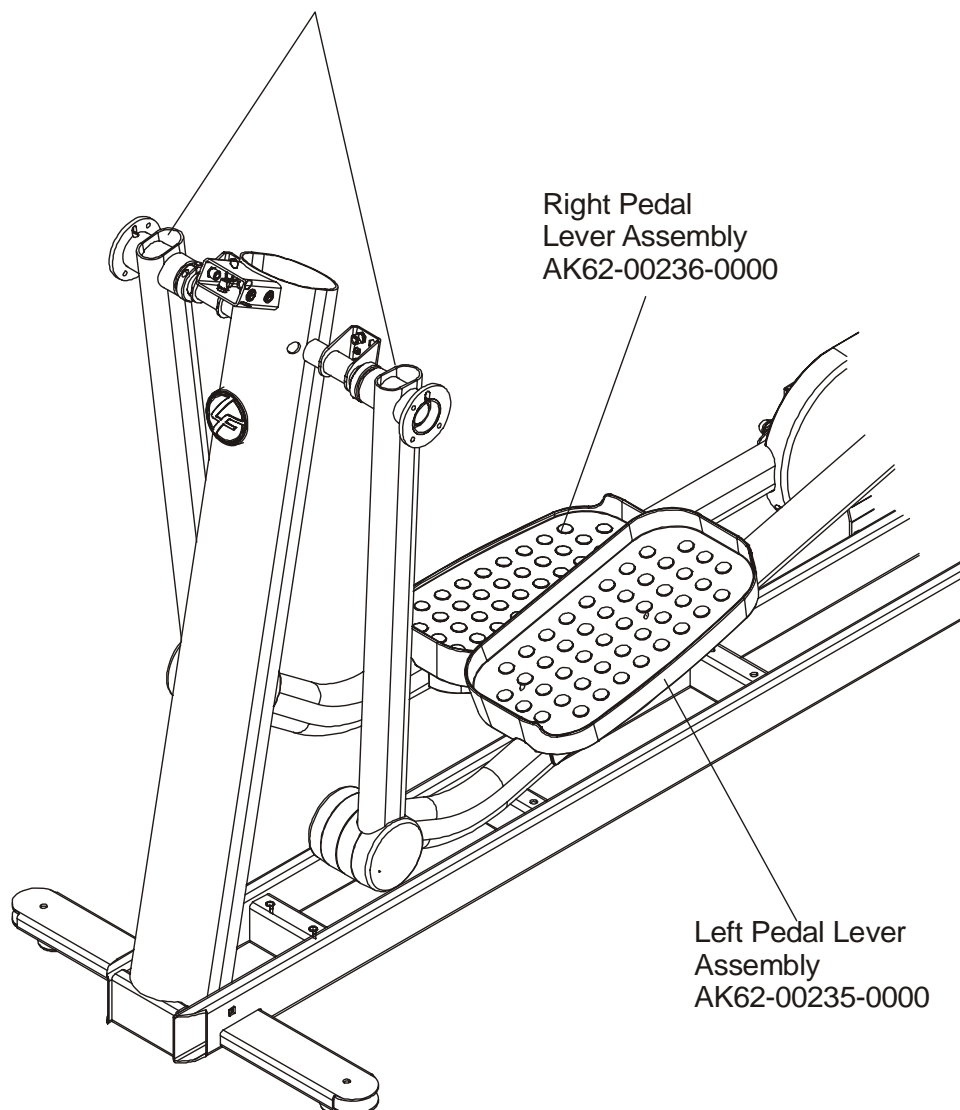




## **ARCTIC SILVER QUIET DRIVE 93XW**

### **Crank Cover and Lower Caps**

**93XW-0XXX-03**

**S/N AXD100000 and up**

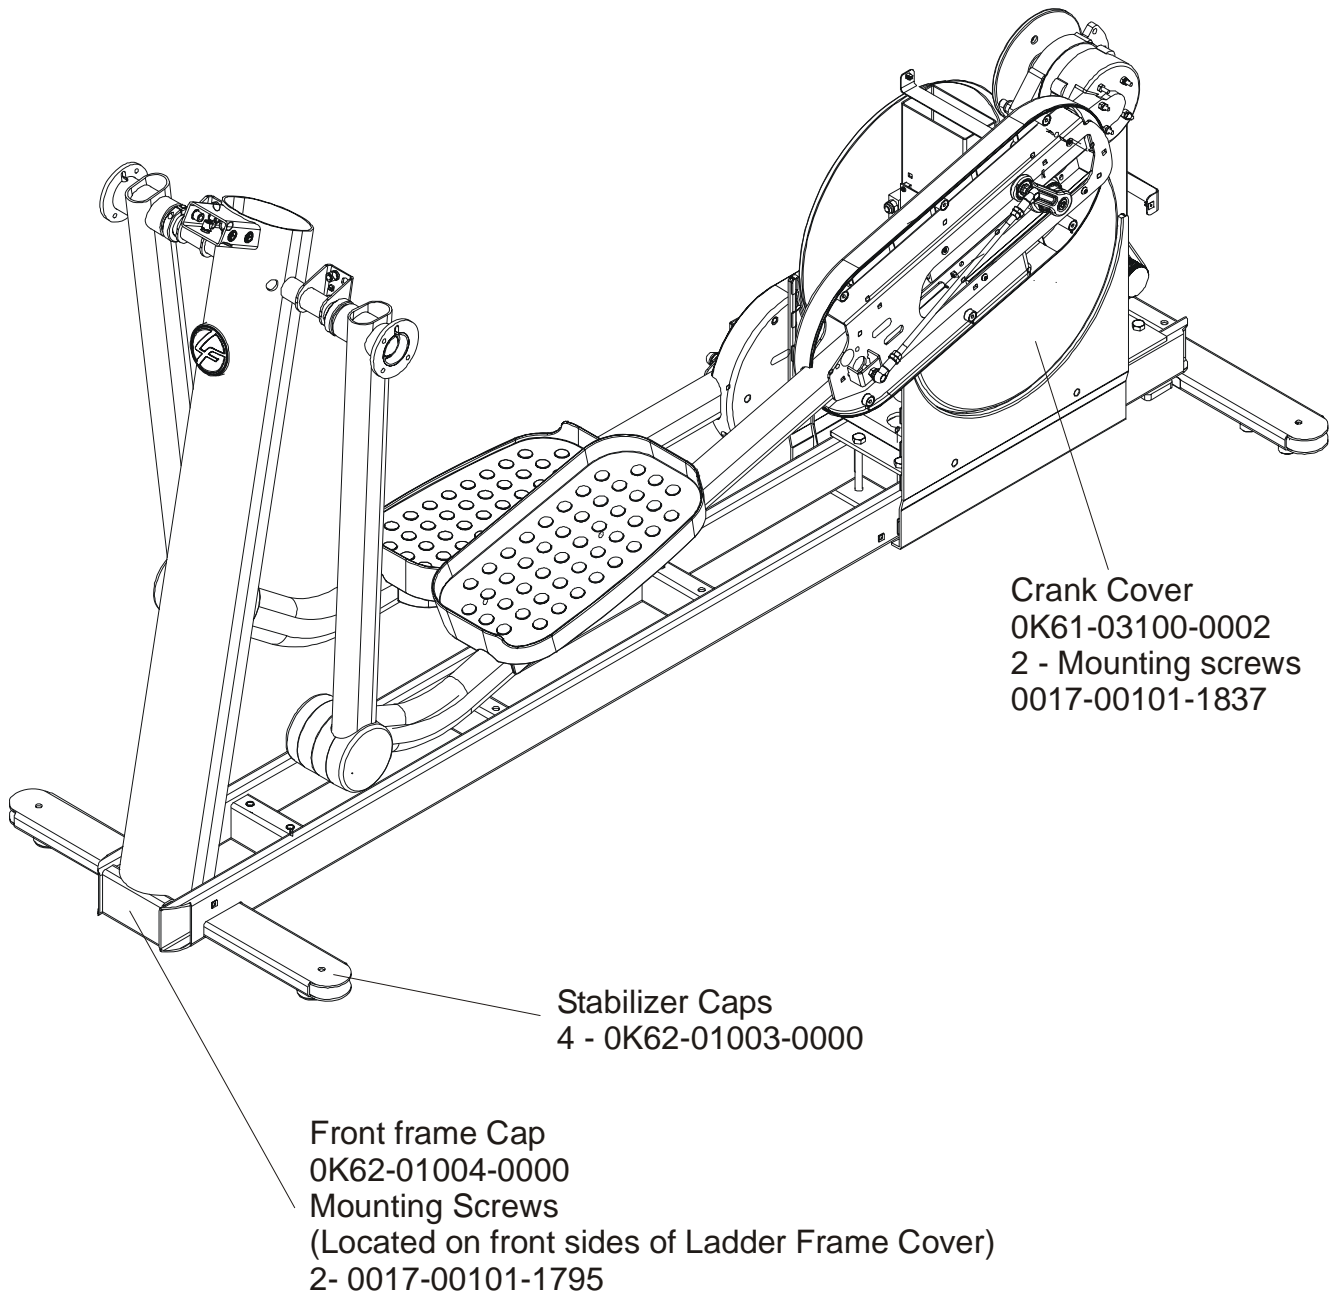


## ARCTIC SILVER QUIET DRIVE 93XW

### Lower Frame Shrouds & Hardware

93XW-0XXX-03

S/N AXD100000 and up

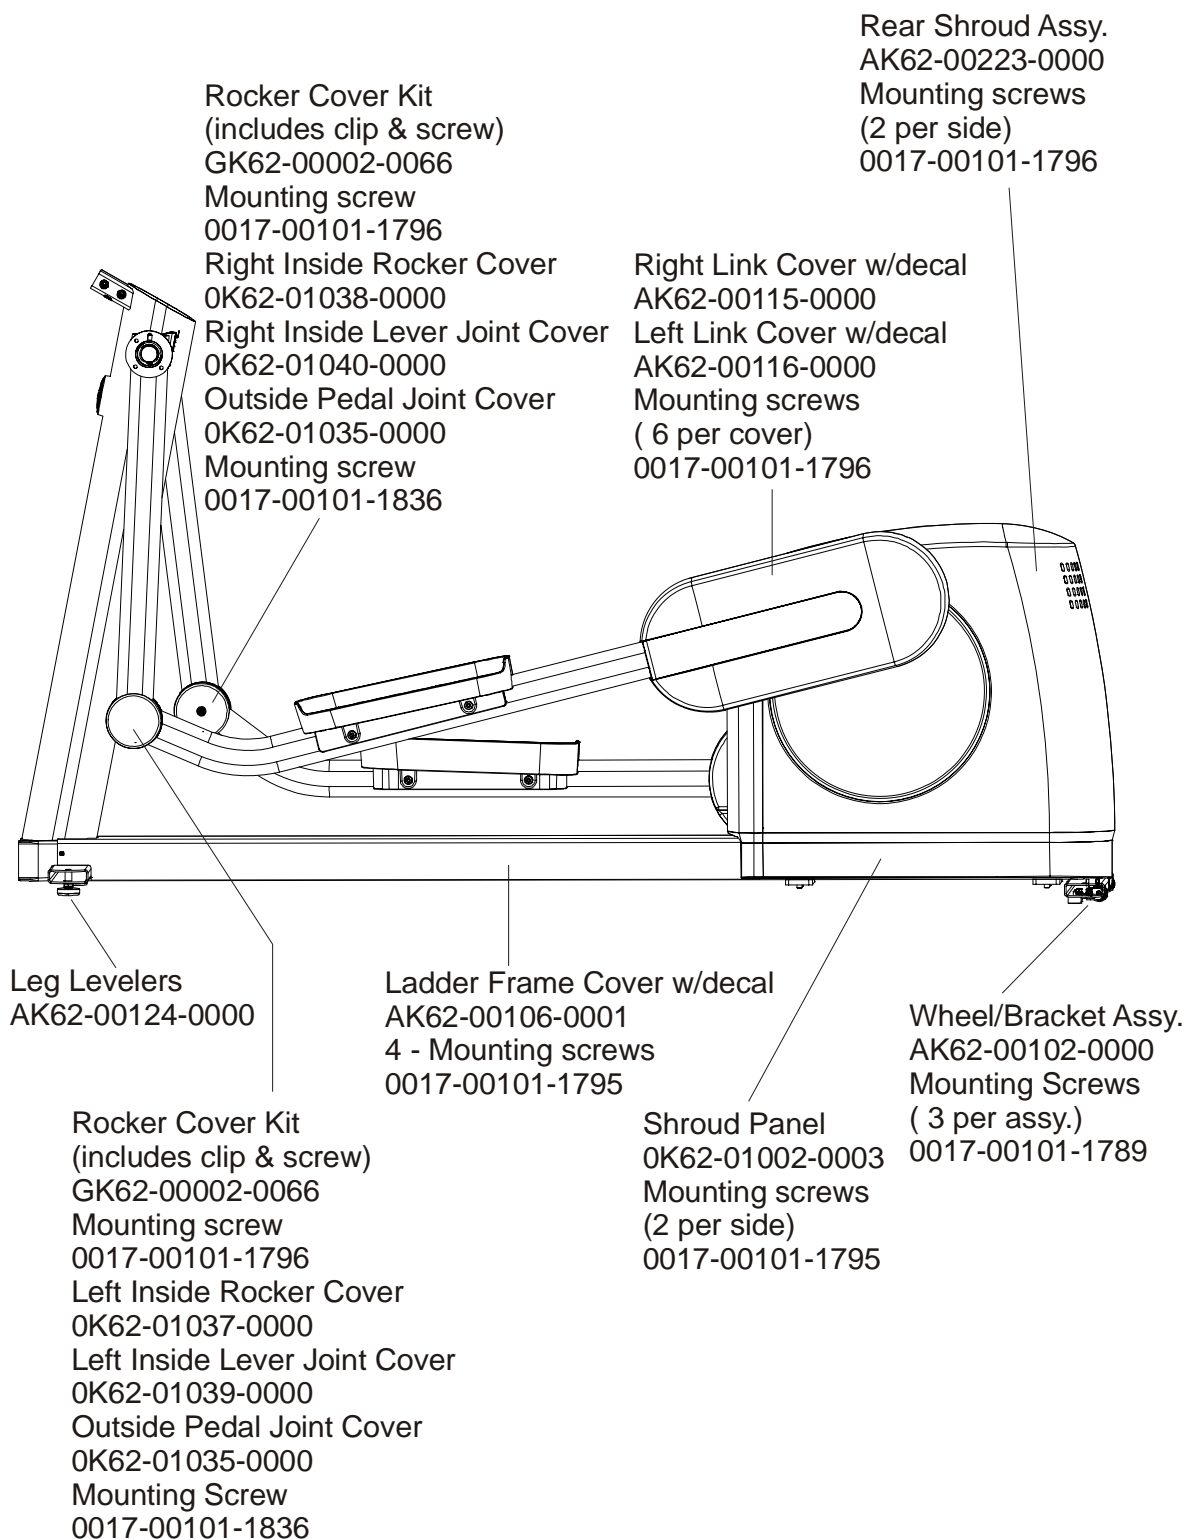


# ARCTIC SILVER QUIET DRIVE 93XW

## Pedal Lever Assembly Components

93XW-0XXX-03

S/N AXD100000 and up

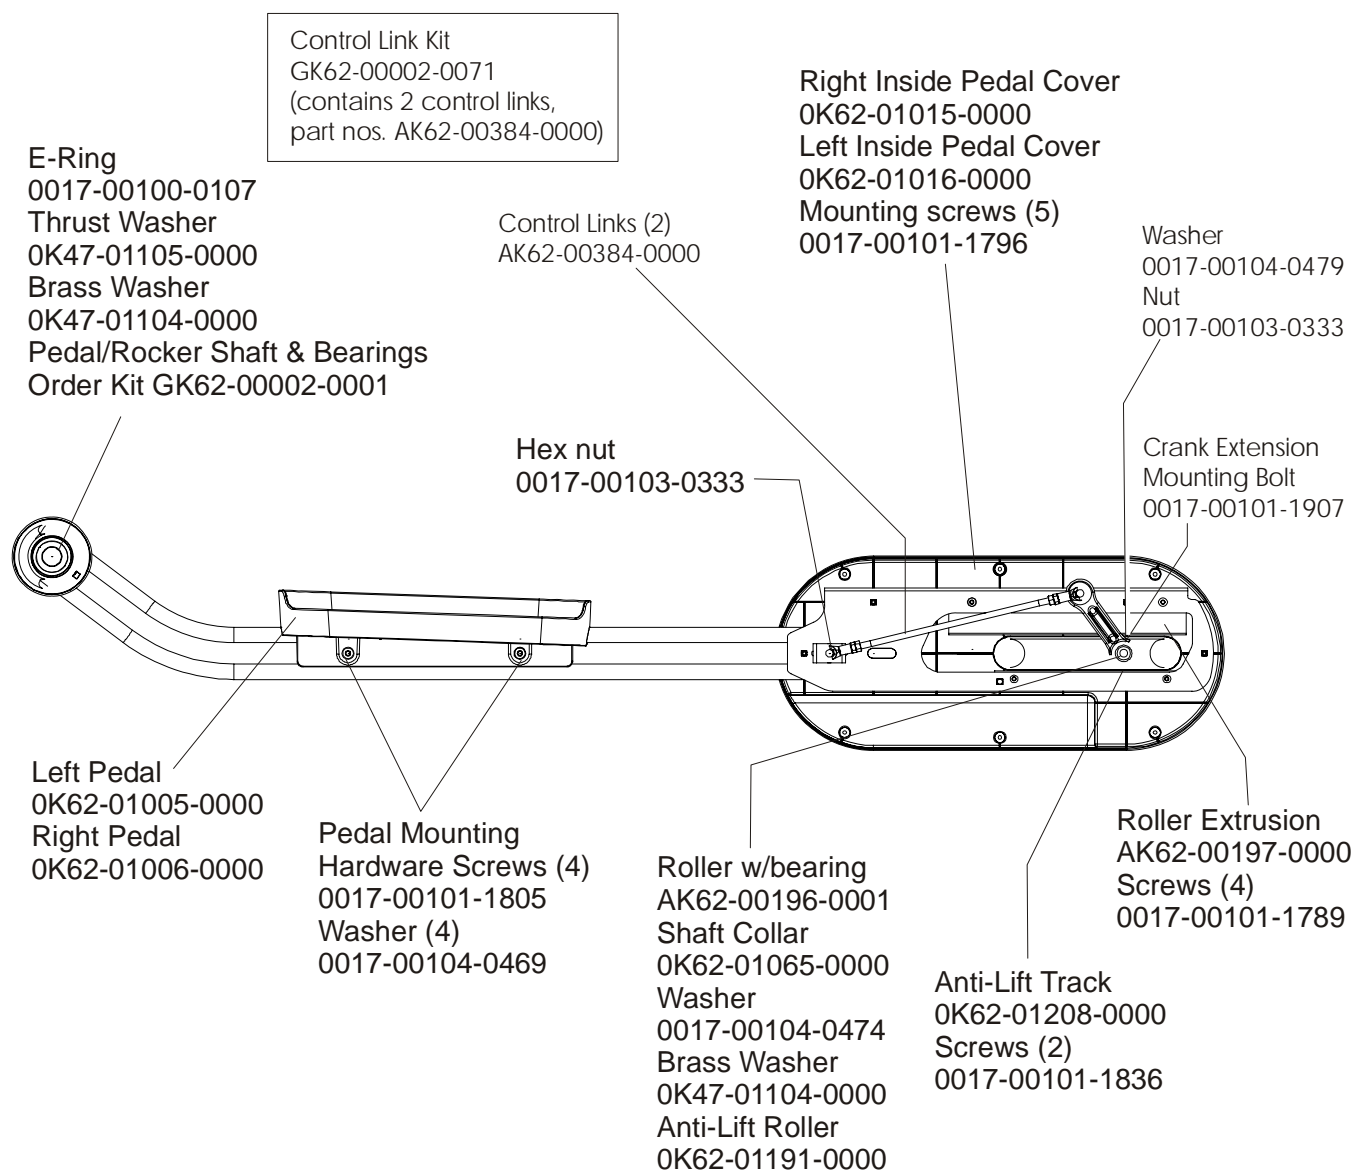


Note: Units with serial number AXD100047 or lower will require kit GK62-00002-0015 when replacing either the tie rod assembly or the crank extension for the first time.

## ARCTIC SILVER QUIET DRIVE 93XW

PCB, Battery, Reed Switch & Bracket

93XW-0XXX-03

S/N AXD100000 and up

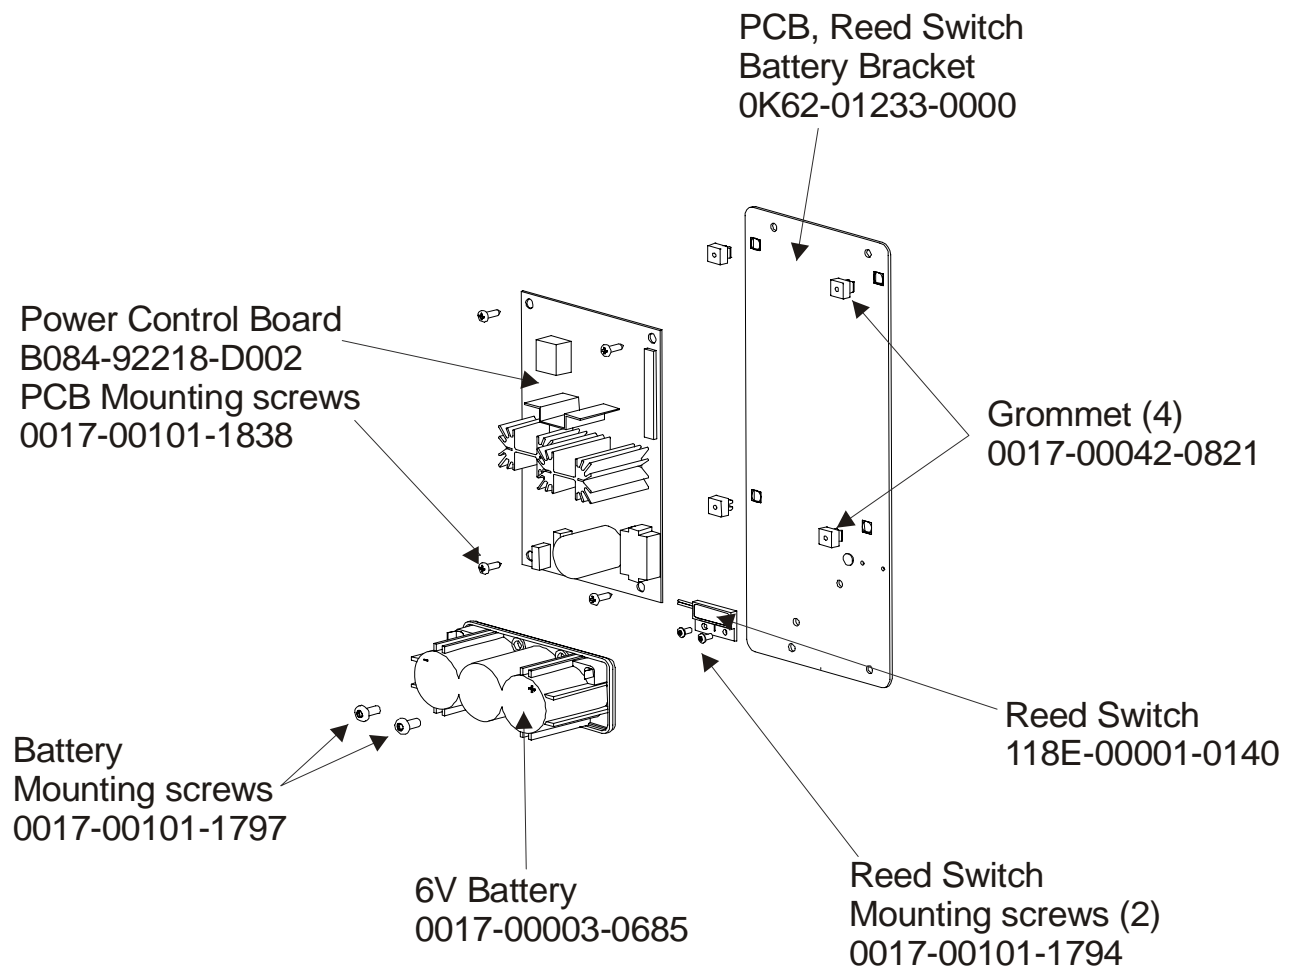

**ARCTIC SILVER QUIET DRIVE 93XW**  
**Bearing-Insert Assembly -AK62-00299-0000**

**93XW-0XXX-03**  
**S/N AXD100000 and up**

Service Kit- GK62-00002-0044


Includes:

- 1- crankshaft
- 2- bearings
- 2- sets of bearing flanges
- 4- nuts and washers

Service Kit- GK62-00002-0045

Includes:

- 1 - intermediate shaft
- 2 - bearings
- 2- sets of bearing flanges
- 4- nuts and washers

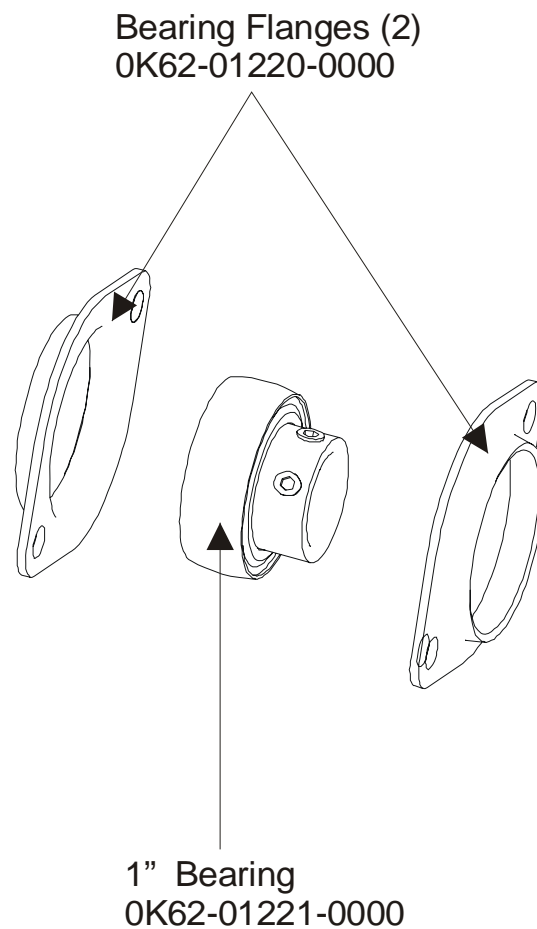


## ARCTIC SILVER QUIET DRIVE 93XW

### Crank Arm Pulley Assembly

93XW-0XXX-03

S/N AXD100000 and up

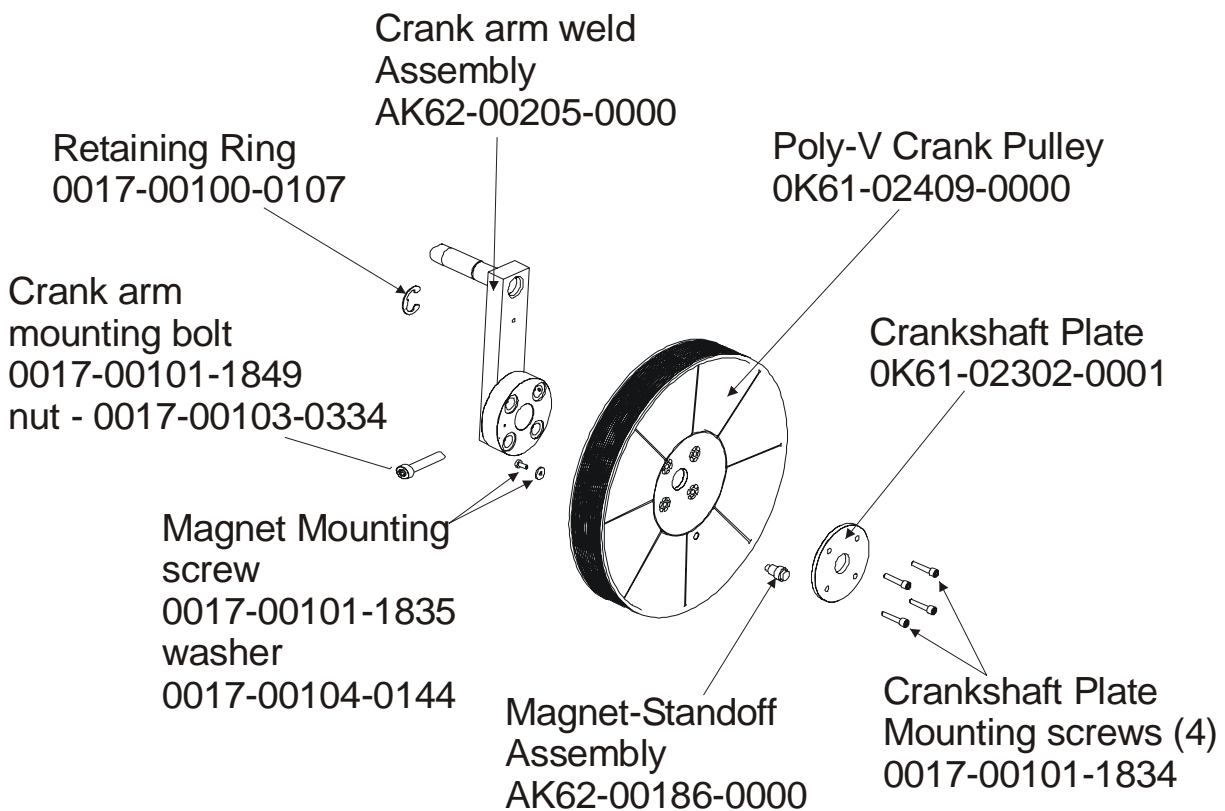


# ARCTIC SILVER QUIET DRIVE 93XW

## Drive Module

93XW-0XXX-03

S/N AXD100000 and up

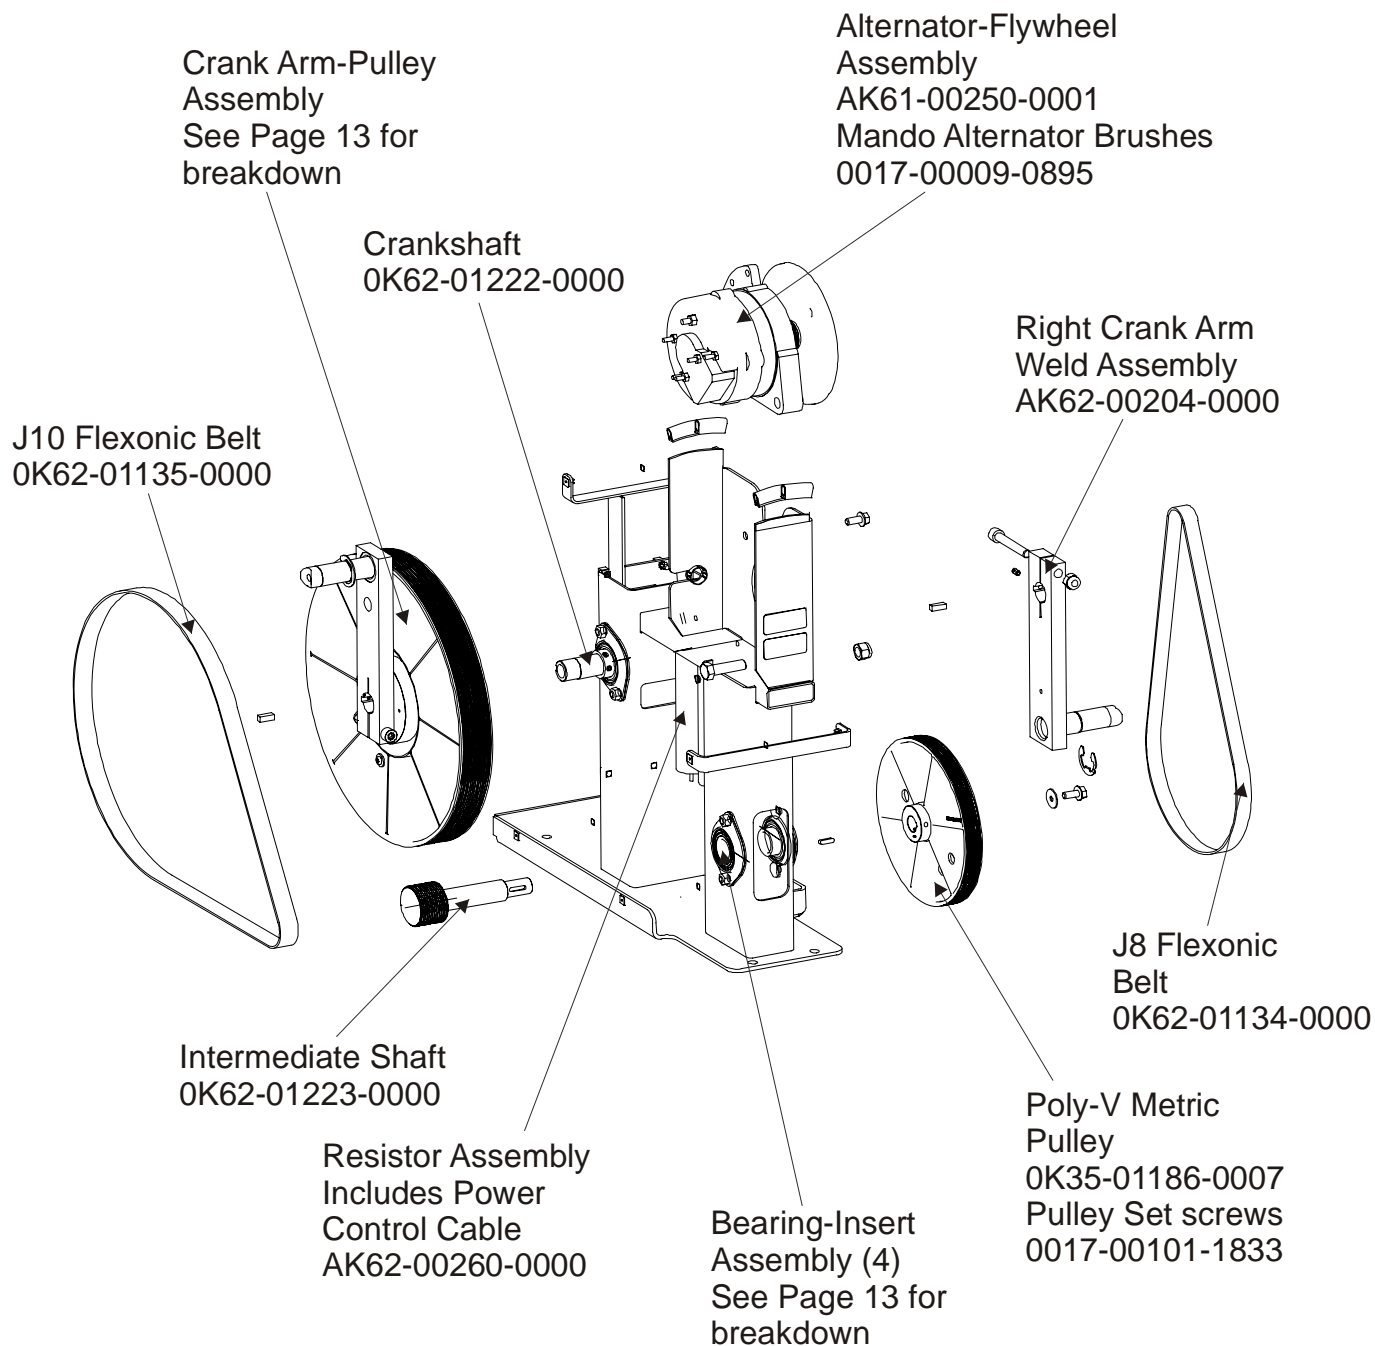


## ARCTIC SILVER QUIET DRIVE 93XW

### Drive Module Hardware

93XW-0XXX-03

S/N AXD100000 and up

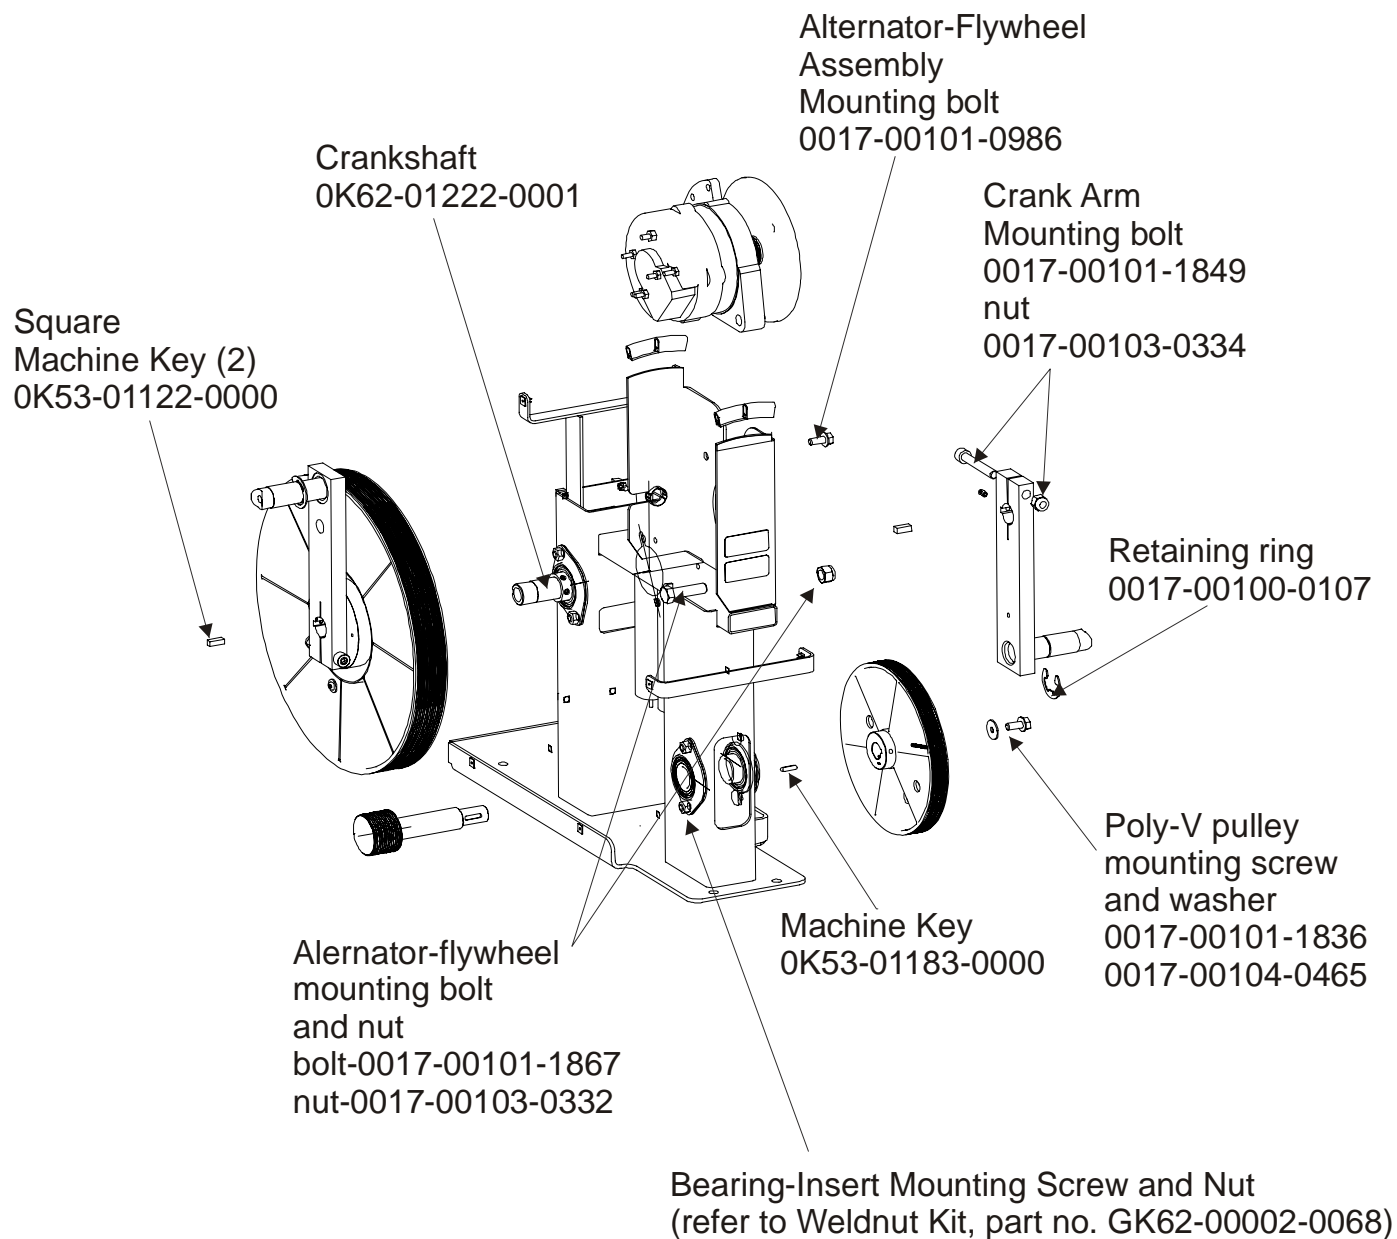



**93XW-0XXX-03**

**S/N AXD100000 and up**

